



Install & Update Guide

Daytona Twin Tec — Windows 7 through Windows 11

Must be connected to the internet for all steps.

New/Fresh Install Procedure

- 1 Download and run the TCFI Software Installer.

https://daytona-twintec.com/content/DTT/Software/TCFI_Software_Installer.exe

- 2 Download and run the Launcher Update (Auto Extract EXE).

https://daytona-twintec.com/content/DTT/Software/M8FI-TCFI-G7G8G9_Latest_Launcher_Update.exe

- 3 From your desktop, run **TCFI Launcher**.

- 4 Update the software:

- Click the button: **Check For Software Update**.
- When prompted, **Save** the file.
- The file will auto run.
- Click **OK** to elevate permissions (UAC).
- Click **Extract**. Do **not** change the destination folder (correct for most Windows 7–11 installs).
- If asked to replace files, choose **Yes to All**.
- Back in TCFI Launcher, click the software to run: **PC_Link** or **TCFI_Log**.

Tip: If you have trouble connecting to devices, update to the latest FTDI USB Drivers. From the launcher, click "**Read USB Driver PC Version Compare To Latest Version**". It reads your PC's driver and the latest available online; if an update is required, you'll be sent to the correct link with instructions.

Existing Install Procedure

Ensure all Daytona Twin Tec software is closed before starting.

- 1 Close all DTT tuning software on your PC.
- 2 Download and run the Launcher Update (Auto Extract EXE).

https://daytona-twintec.com/content/DTT/Software/M8FI-TCFI-G7G8G9_Latest_Launcher_Update.exe

- 3 From your desktop, run **TCFI Launcher**.

- 4 Update the software:

- Click **Check For Software Update**.
- When prompted, **Save** the file.
- The file will auto run.
- Click **OK** to elevate permissions (UAC).
- Click **Extract**. Do **not** change the destination folder (correct for most Windows 7–11 installs).
- If asked to replace files, choose **Yes to All**.
- Back in TCFI Launcher, click the software to run: **PC_Link** or **TCFI_Log**.